

## **ILLUSTRATED PARTS BREAKDOWN**

### **PURPOSE:**

*The Illustrated Parts Breakdown* in each section provides information on components, assemblies and detail parts for identification, determination of needed replacement parts and an illustration of assembly and disassembly relationships.

### **GROUP ASSEMBLY PARTS LIST:**

*The Group Assembly Parts List* consists of those components, assemblies and detail parts which comprise the specific piece of equipment. Each assembly listed is followed immediately by its detail parts, properly indented thereunder to show their relationship to the assembly; for example, a part listed under indenture "2" is a component of the assembly listed under indenture "1" immediately above it. Items used to attach parts or assemblies to each other designated "(ATTACHING PARTS)" and are listed immediately following the item or items they attach: The symbol ---\*--- denotes the end of attaching parts. The quantity required or "REQ" column lists the quantity of the item required in one assembly of which it is a component. It is, therefore, not necessarily the total quantity of the part required in the complete equipment. Items indicated by an asterisk (\*) in the "REQ" column *are recommended spare parts to be kept on hand by the customer*. The term "Ref", if required, denotes that the assembly has been previously listed in the breakdown and at that point reflected the quantity required. The 5-digit numbers shown in parenthesis (00000) are SOMAT<sup>®</sup> part numbers and *should be used when ordering parts*.

### **PARTS ORDERING INFORMATION:**

Include the following information when ordering parts.

1. The correct, complete description of the part required. (See Group Assembly Parts List.)
2. The serial number of the unit on which the part is to be used.
3. Complete shipping instructions.

The above information will help expedite the delivery of your needed parts. When ordering spare or replacement parts, direct the above information to:

**SERVICE DEPARTMENT  
SOMAT COMPANY**

**165 Independence Court, Lancaster, PA 17601**

**Telephone 717-397-5100 \* Fax 717-291-0877**

**1-800-23-SOMAT (1-800-237-6628)**

**[parts@somatcompany.com](mailto:parts@somatcompany.com)**