



READ THE MANUAL COMPLETELY BEFORE ATTEMPTING TO OPERATE THE UNIT.

HIGH VOLTAGE! DO NOT PERFORM ANY REPAIRS TO MOTORS OR CONTROL SYSTEMS WITHOUT TURNING OFF THE MAIN POWER.

ALWAYS **TURN THE MAIN POWER OFF** AND LET ALL MOTORS COME TO A STANDSTILL BEFORE DOING ANY MAINTENANCE ADJUSTMENTS OR CLEANING OF THE UNIT.

BEFORE STARTING, BE SURE **ALL PERSONNEL ARE CLEAR** OF MOVING PARTS.

KNOW LOCATION AND FUNCTIONS OF ALL **START/STOP BUTTONS** AND SAFETY SWITCHES.

DURING PERIODIC MAINTENANCE, **CHECK ALL SAFETY SWITCHES** TO BE SURE THEY ARE OPERATING PROPERLY.

DO NOT REMOVE OR ALTER GUARDS.

DO NOT REMOVE SAFETY LABELS. IF LABELS ARE MISSING OR DESTROYED, CONTACT FACTORY FOR REPLACEMENT.

DO NOT OBSTRUCT ELECTRICAL PANELS OR PUSH BUTTONS.

GOOD HOUSEKEEPING IS THE MOST IMPORTANT SAFETY PROCEDURE.

IMPORTANT

The Instruction Manual is important to the proper operation and maintenance of your SOMAT[®] System. It should be readily available to those who are responsible for the operation and performance of the SOMAT[®] equipment.

Due to the high cost of preparing replacement manuals, a charge will be made for duplicate manuals beyond those furnished with the original shipment.

For ordering duplicate manuals, please contact:

***SERVICE DEPARTMENT
SOMAT COMPANY
165 Independence Court, Lancaster, PA 17601 USA
Telephone 717-397-5100, Fax 717-291-0877
1-800-23-SOMAT (1-800-237-6628)
Internet: www.somatcompany.com***